

Нагреватель с отдельной подачей воздуха

LE 10000 NT

Технические характеристики

Архангельск (8182)63-90-72
Астана +7(7172)727-132
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04

Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15

Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93



Two LE 10000 HT air heaters and
an ASO blower in combination
with a shrinking tunnel.

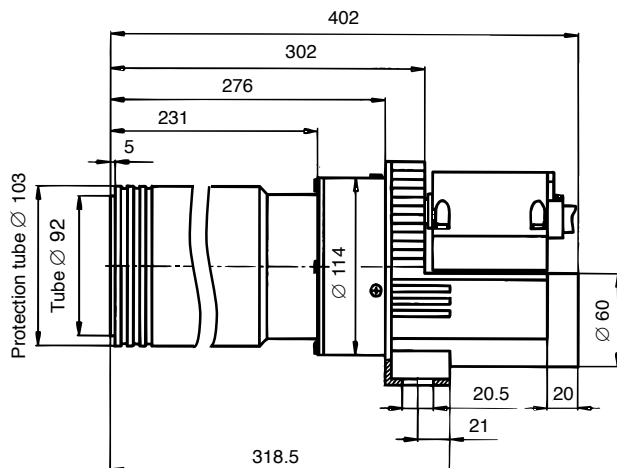
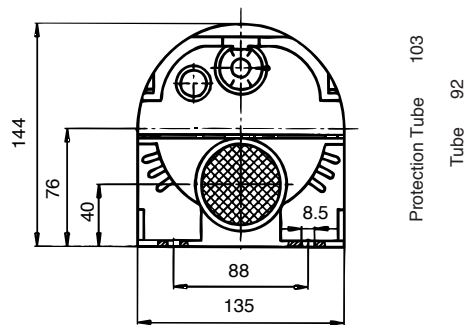


High temperature air heater

LE 10 000 HT (up to 900 °C)



Installation dimensions in mm



Technical data

High temperature LE 10000 HT

No integrated power electronics		•
Heating element tube with protective tube		•
Max. air outlet temperature	°C	900
Min. air flow	l/min	1200
Max. air inlet temperature	°C	100
Max. ambient temperature	°C	100
Weight	kg	4.0
Mark of conformity		CE
Protection classe I		⊕

302

Optional power controller

DSE three-phase controller (page 51)

Optional temperature regulation

DSE three-phase controller (page 51) and KSR DIGITAL temperature regulator (page 50)

Voltage V ~	3 × 400	3 × 480
Power consumption kW	15	15
Order no.	110.568	113.349

318.5

Combination possibilities

- Leister air heater at maximum heat power and without nozzle with Leister blower at 50 Hz, 1.5 m hose length and unimpeded air outflow.
- Hot air temperature 3 mm after air outlet, measured at the hottest point.
- Air flow at 20 °C, 101.3 kPa compliant with ISO 6358.

Power Type	Number LE × Power consumption kW	Air flow l/min	Temperature °C
ROBUST	1 × 15	1 × 1100	850
ASO	1 × 15	1 × 2200	690
ASO	2 × 15	2 × 2100	700
AIRPACK	1 × 15	1 × 3400	340
AIRPACK	2 × 15	2 × 1650	620









Air flow and temperature values may deviate from those above based on the design of the entire hot air system (including nozzles, air hoses, environmental conditions).


➔ Accessories page 45

Shrinking a PE sleeve on cans with temperature regulated hot air produces precise quality.



Accessories LHS 61L / LE 10000 / LE 10000 HT (Ø 92 mm)

125.318		Flange connector, push-fit a = 120 mm
107.244		Round nozzle, push-fit d = 50 mm
107.273		Extension nozzle, push-fit (a × b) 500 × 60 mm
107.269		Angled nozzle, push-fit (a × b) Schenkellänge 175 × 175 mm
106.031 106.035 107.268 106.036 106.033 106.038		Tubular nozzle, push-fit (a × b × c) 1000 × 800 × 2 mm 1185 × 900 × 1.6 mm 1288 × 1000 × 1.5 mm 1535 × 1250 × 1.2 mm 1550 × 1350 × 1.1 mm 2225 × 2000 × 0.8 mm
107.274 106.028 107.272 106.018 106.024 107.267 106.023 106.026		Wide slot nozzle, push-fit (a × b) 130 × 17 mm 220 × 12 mm 300 × 12 mm 400 × 10 mm 500 × 7 mm 500 × 15 mm 600 × 4 mm 600 × 9 mm
107.341		Shell reflector, push-fit (a × b) 160 × 370 mm
107.276		Sieve reflector, push-fit Ø 260 mm
133.517		Thermocouple holder
144.039		Compressed air connection
> LHS 61		

144.030 144.028 144.026		System Interface cable 1 m 3 m 5 m one end single wires, one end RJ45
-------------------------------	--	---

По вопросам продаж и поддержки обращайтесь:

Архангельск (8182)63-90-72
Астана +7(7172)727-132
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04

Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15

Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: ets@nt-rt.ru || www.leister.nt-rt.ru